


NUMBER:	UG15004
CATEGORY:	User Guide
DATE:	29/07/2016
VERSION:	1.1

Panasonic KX-DT543/KX-DT546 – Quick Reference Guide


The Handset

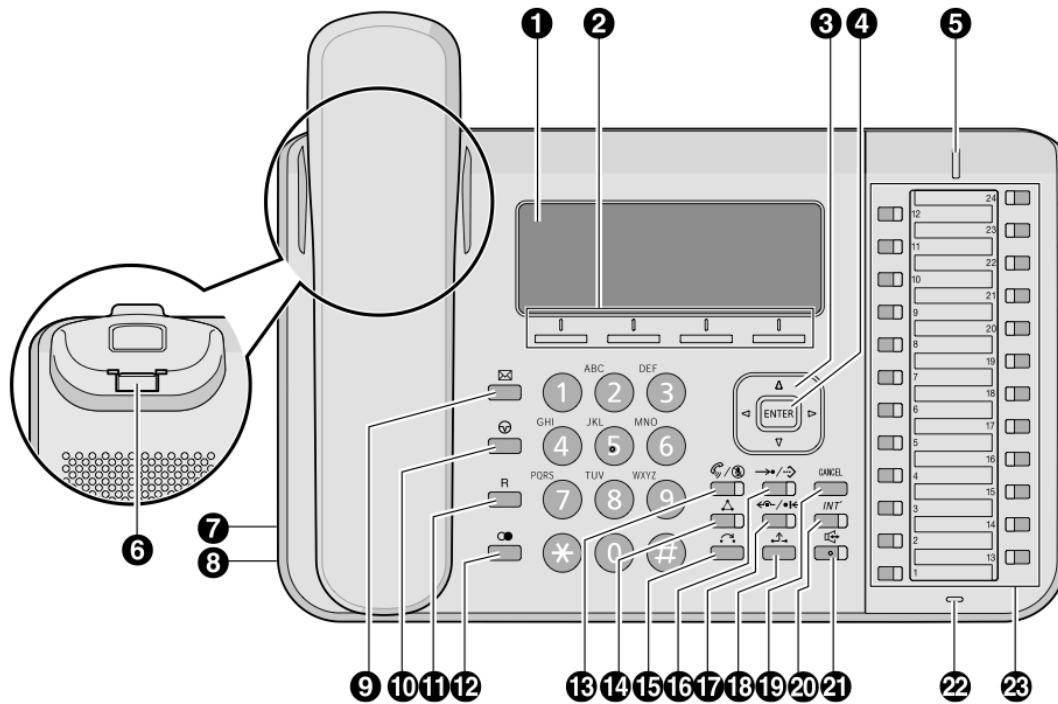


- | | |
|---------------------------------|-----------------------|
| 1. LCD panel display (backlit) | 13. Auto ANS/Mute |
| 2. Soft keys | 14. Conf (conference) |
| 3. Navigation panel | 15. Transfer |
| 4. Enter | 16. Auto Dial/Store |
| 5. Message waiting lamp | 17. FWD/DND |
| 6. Handset hook | 18. Hold |
| 7. EHS (Electronic hook-switch) | 19. Cancel |
| 8. Headset jack (corded) | 20. Intercom |
| 9. Message | 21. SP-Phone |
| 10. Pause | 22. Microphone |
| 11. Flash/Recall | 23. Programmable keys |
| 12. Redial | |

Making Calls

Calling another extension

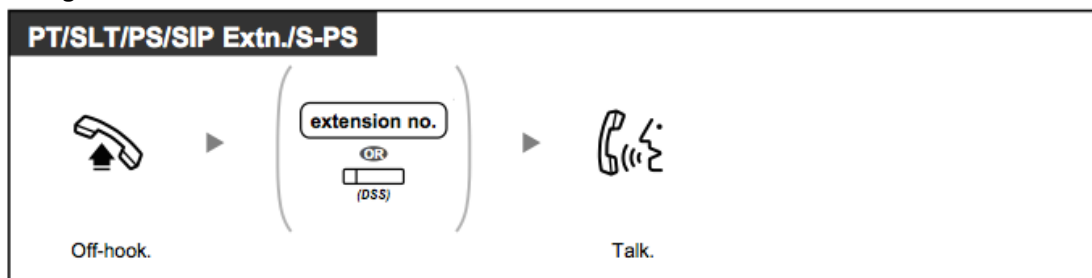


Calling an outside party

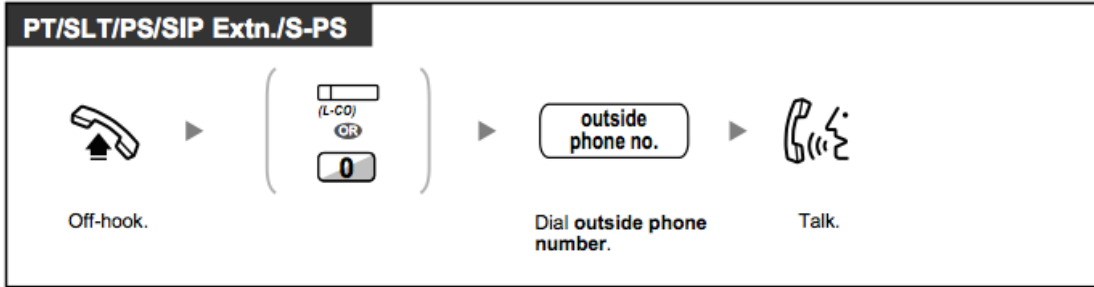


Call Control

Transferring a call to an extension

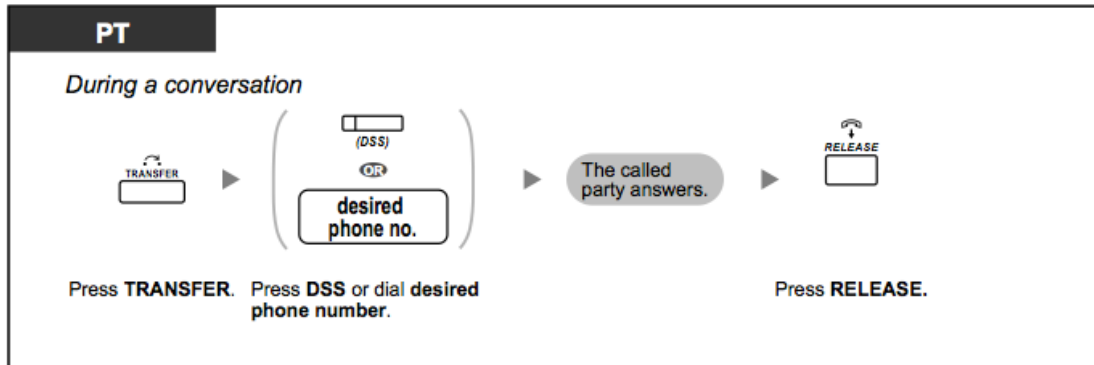

Conference calls

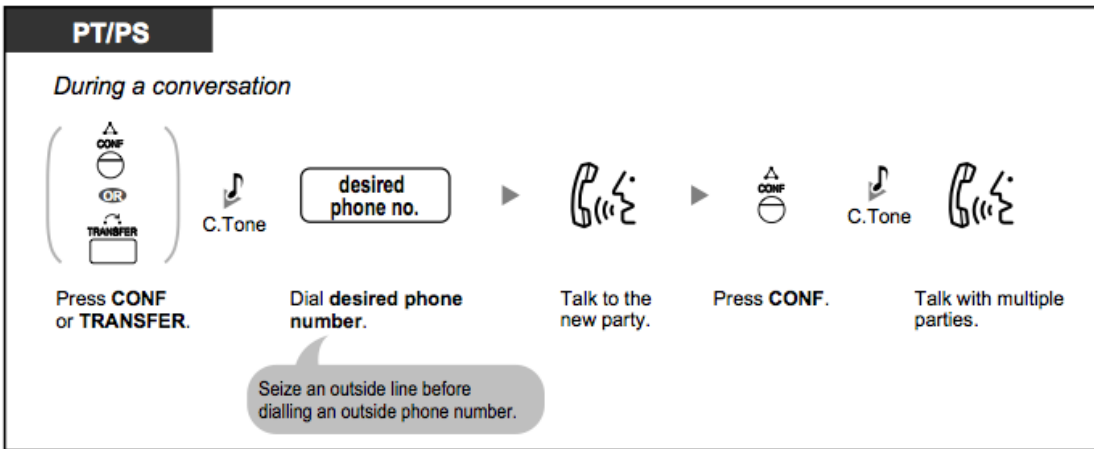

Speed Dial

Access personal speed dial

