


NUMBER:	UG15006
CATEGORY:	User Guide
DATE:	29/07/2016
VERSION:	1.1

Panasonic KX-DT333/KX-DT346 – Quick Reference Guide


The Handset

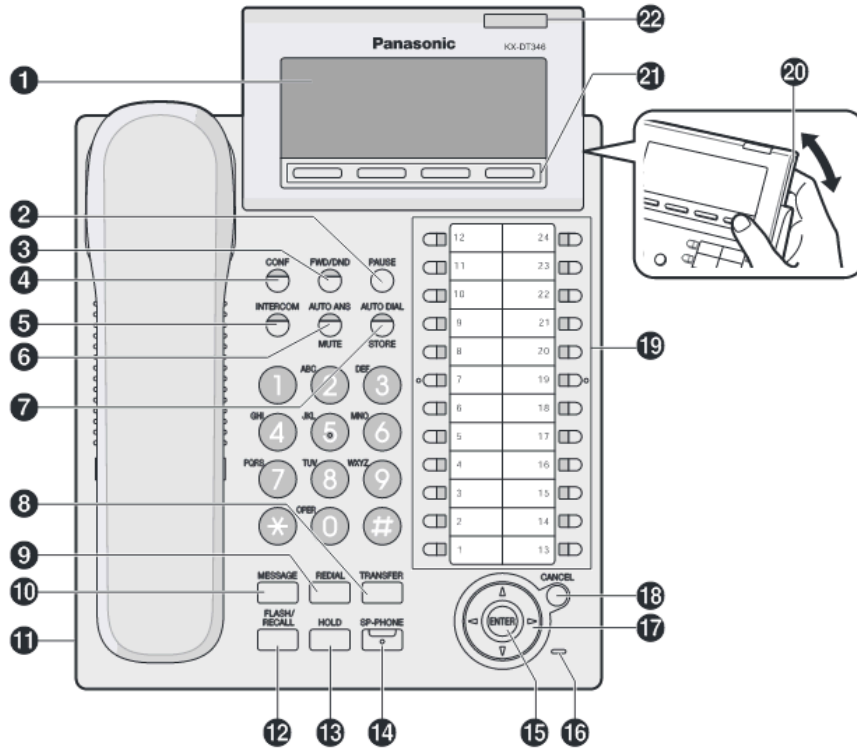


- | | |
|--------------------------------|--------------------------|
| 1. LCD panel display (backlit) | 12. Flash/Recall |
| 2. Pause | 13. Hold |
| 3. FWD/DND | 14. SP-Phone |
| 4. Conf (conference) | 15. Enter |
| 5. Intercom | 16. Microphone |
| 6. Auto ANS/Mute | 17. Navigation panel |
| 7. Auto Dial/Store | 18. Cancel |
| 8. Transfer | 19. Programmable keys |
| 9. Redial | 20. LCD panel adjustment |
| 10. Message | 21. Flexible keys |
| 11. Headset jack (corded) | 22. Message waiting lamp |

Making Calls

Calling another extension

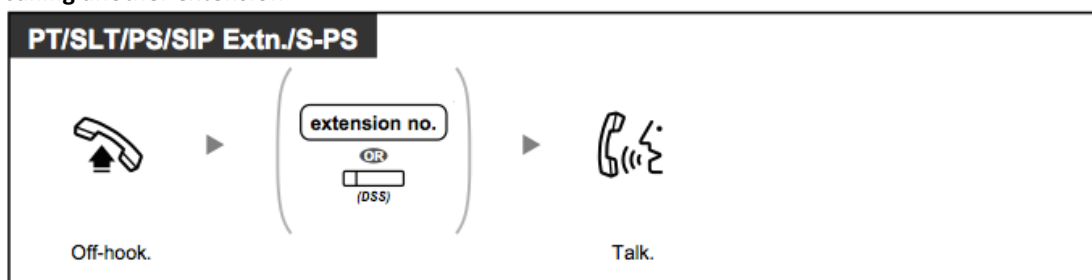


Calling an outside party

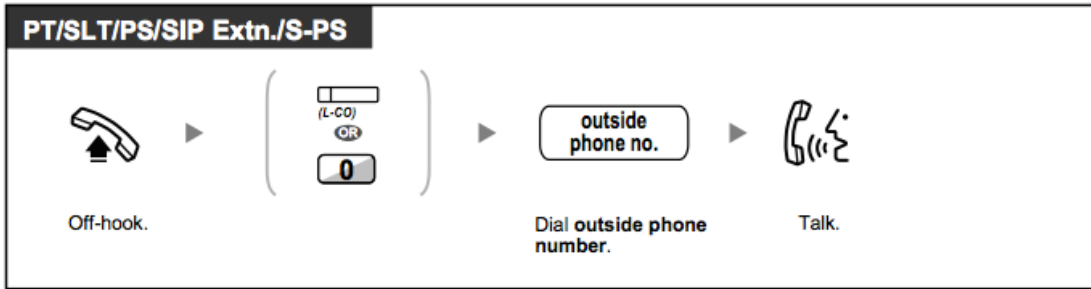


Call Control

Transferring a call to an extension

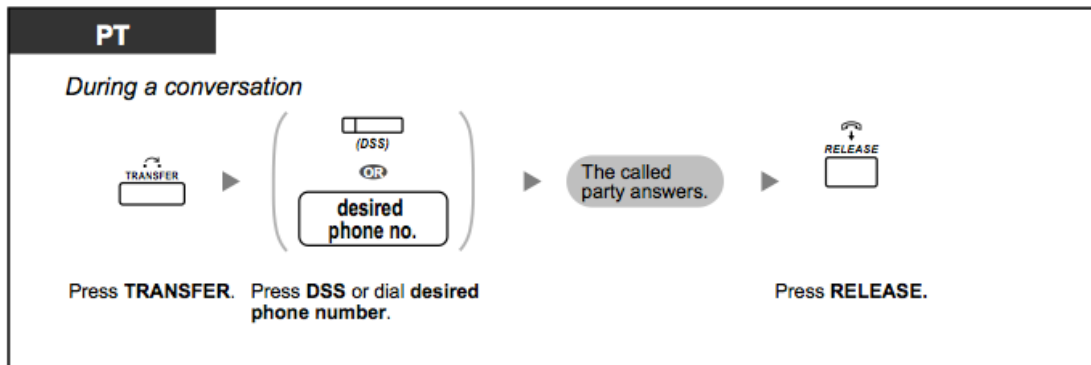

Conference calls

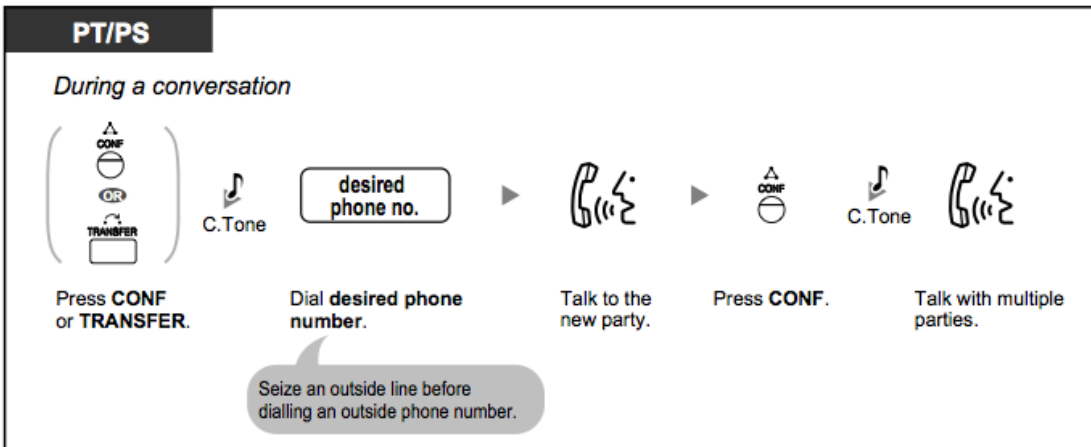

Speed Dial

Access personal speed dial

